



AIRGLOW® SNAPBAG® SERIES

MANUAL TO SET UP THE UNIT

PLEASE ALSO REFER TO THE LUMINAIRE INSTRUCTIONS REGARDING USE OF ACCESSORIES.

PAGE 1




Unroll the dirt cover and lay the double frame section on it. Insert the tube into the first valve, making sure that the Velcro parts of the 2 frames do not stick together.

Repeat for the second frame and inflate the pillow.



Attach the pillow to the frame!
(The short end of the pillow with the sticker goes on the short frame!)

Make sure that the loop velcro of the pillow sticks together with the hook velcro of the frame on the long sides.
The 8 extra velcro lips on each side must not protrude the black part of the tube

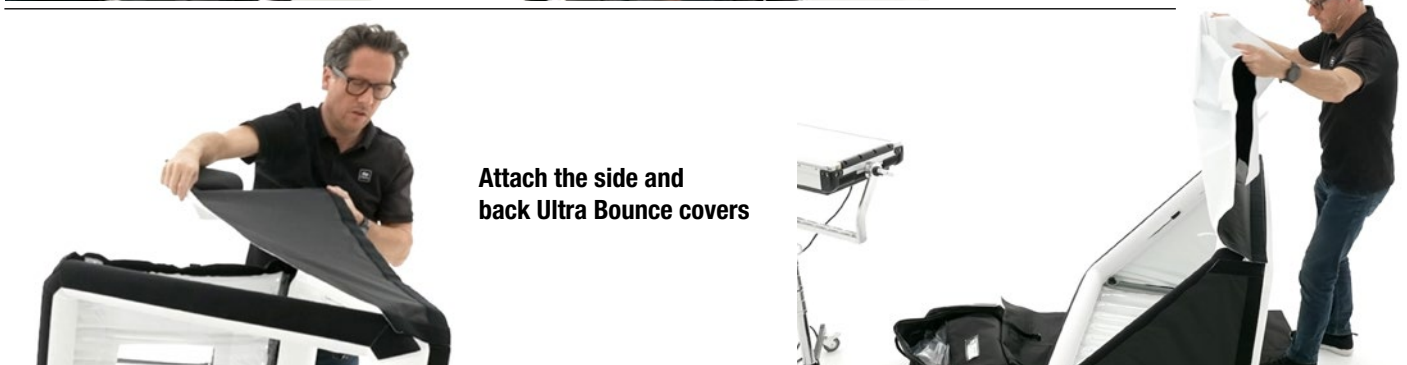

Attach the side and back Ultra Bounce covers



AIRGLOW® SNAPBAG® SERIES


MANUAL TO SET UP THE UNIT

PLEASE ALSO REFER TO THE LUMINAIRE INSTRUCTIONS REGARDING USE OF ACCESSORIES.

PAGE 2



Open the Buckles and attach the Airglow on the flat Panel.
!CAUTION!
No direct contact with hot fixture parts
> 40° / 104°F on the transparent Pillow!

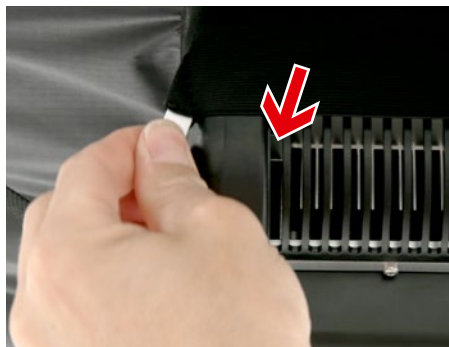

Close the buckles and loop the elastics over the fixture to prevent spray light.

READY TO GO!

You can now add other reflective backgrounds and fronts to the Airglow



Hard Silver



Ultrabounce



Bleached Muslin



Unbleached Muslin





AIRGLOW® SNAPBAG® SERIES

MANUAL TO SET UP THE UNIT

PLEASE ALSO REFER TO THE LUMINAIRE INSTRUCTIONS REGARDING USE OF ACCESSORIES.

PAGE 3

DEFLATE:

Remove the front screens and the extra reflective inserts. You can leave the Ultra Bounce Sides and Backing on the Airglow, simply open all 3 valves and fold the Airglow so that it does not stick together, give the Air a little time to deflate and fold the unit and pack it into the transport bag.



Use the QR Code
for the DoPchoice
Instructions